


Graphic Display

Quick Reference Guide

B&G
EN

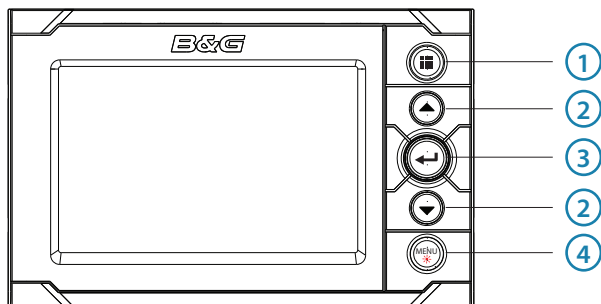


Keys

1	<p>Page key: Each short press of the Page key scrolls through the data pages in rotation. From any data page, a long press of the Page key will bring up the pages menu, from where you can select a page directly from a list.</p> <p>From any dialog, the Page key navigates back to the last active page.</p> <p>From any menu, the Page key navigates back one step.</p>
2	<p>Arrow keys: Scroll up/down through selected menus/set values.</p>
3	<p>Enter key: Enter the selected sub menus and confirm selection.</p>
4	<p>MENU / Lights key: Single press: enter the Page menu.</p> <p>Double press: enter the Settings menu.</p> <p>From any data page: Press and hold for 3 seconds enters the Display Setup.</p>


Menu options

Page menu

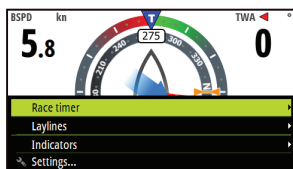

The Page menu vary from page to page. All page options include a **Race Timer** and **Settings**, which will access the Settings menu. All other options listed will relate to the current data page.

Settings menu




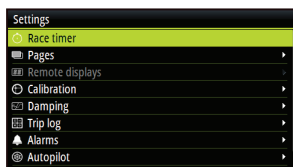


From the Settings menu you can access display options, display and system settings, calibration etc.

Menu structure


Use the **Up, Down** and **Enter** keys to navigate through the menu options. Use the **Page** key to go back one step.

Example of how to access the Time dialog from the Settings menu

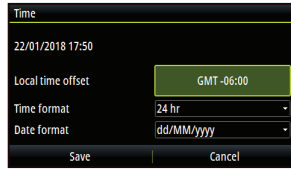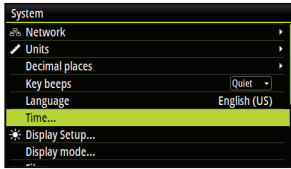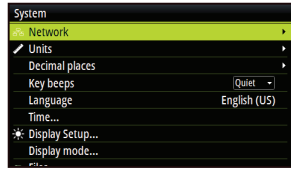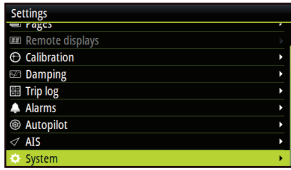

Select preferred Time and Date format, and press **Save**.

Standby



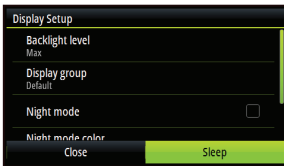


All of the displays can be placed in **Standby** mode from the Display Setup dialog. A single press of the **MENU** key will turn the displays back on.



Configuring a remote (HV) display

From the Settings menu, select **Remote Displays**.

Select the remote display that you wish to configure.

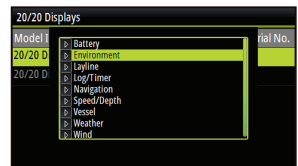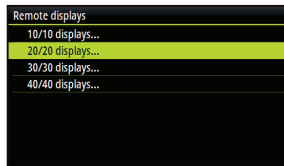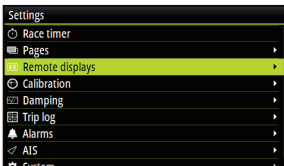


Select the information source you wish to show on the selected HV display.

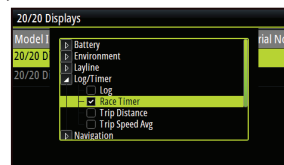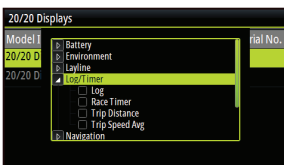

Once selected, the screen will revert to the Settings menu.



Page navigation

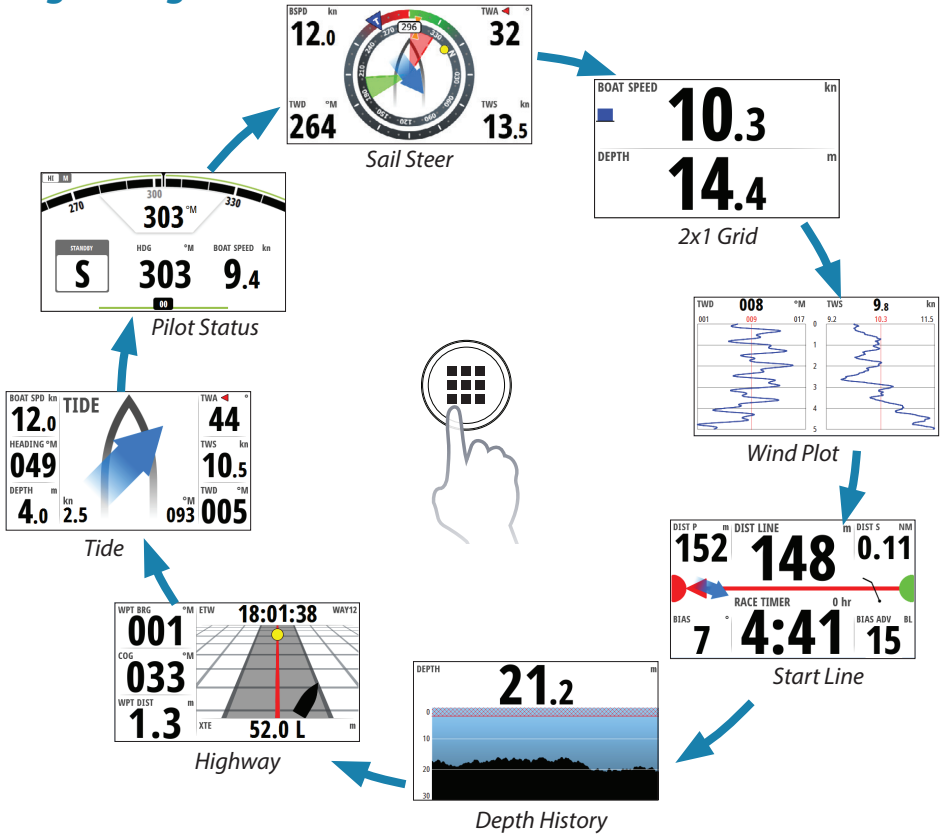

Enabling/Disabling a data page



To make a data page available via the page key, it has to be selected as one of the eight available pages:

- 1 Press the **MENU** key twice to enter the Settings menu
- 2 Highlight the **Pages** option, then press **Enter** twice
- 3 Highlight the required page, then press **MENU**
- 4 Press **Enter** to switch the page on or off
- 5 Press **Page** to step back in the system, one step at a time.

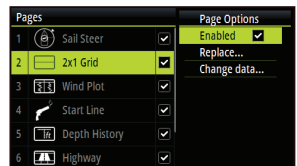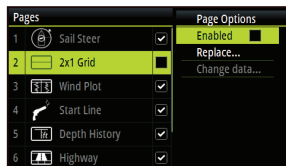

To learn about configuring pages, replacing pages etc., refer to the H5000 Operator manual.

Lighting

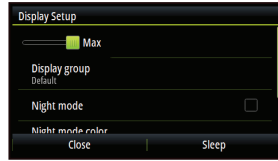
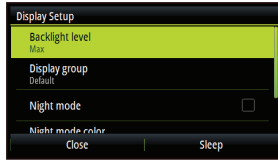


Control the light level, set night mode and night mode color. Adjusting the backlight settings will affect all other displays in the same display group.

Race timer

Once the countdown timer reaches zero it will start counting up, showing the elapsed time from zero. The timer will continue to count until it is stopped.




Set start value

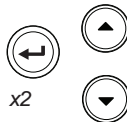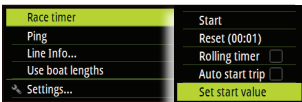

Press **OK** to save.


Use the arrow keys to select a number in the start value. Press **Enter** to move to each consecutive number field. When complete, confirm the value with **OK**.

Start/Synchronize/Stop timer

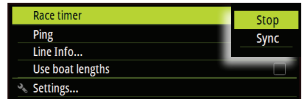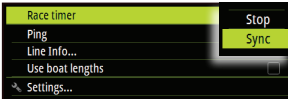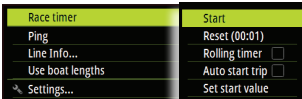


→ **Note:** When the timer is counting down, selecting **Sync** will synchronize the time up or down to the nearest full minute.

Reset timer

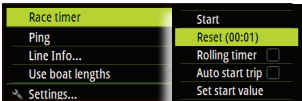

Selecting **Reset** will reset the timer to the start value. If the timer was running, it will continue to run from the start value.

Auto start trip

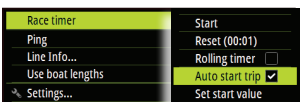

Selecting **Auto start trip** will enable the Trip Log to record your time and mileage from the moment the countdown timer begins counting up from zero.